

Stereo Speaker System

取扱説明書

Operating Instructions

お買い上げいただきありがとうございます。



電気製品は安全のための注意事項を守らないと、火災や人身事故になることがあります。

この取扱説明書と別冊の「安全のために」をよくお読みのうえ、製品を安全にお使いください。

お読みになったあとは、いつでも見られるところに必ず保管してください。

SRS-P11Q

© 2004 Sony Corporation Printed in Thailand

正しくお使いいただくために

- 次のような場所には置かないでください。
—直射日光の当たる場所や熱機具の近くなど、温度の高い所
- 湿気やほこりのある所
- 振動のある所
- TV、時計、クレジットカードなど磁気の影響を受ける物はスピーカーシステムの近くに置かないでください。
- キャビネットを清掃する際、シンナーやベンジン、アルコールなどは表面の仕上げを傷めますので使わないでください。

よくあるお問い合わせ、窓口受付時間などはホームページをご活用ください。
<http://www.sony.co.jp/support>

使い方相談窓口	修理相談窓口
フリーダイヤル0120-333-020	フリーダイヤル0120-222-330
携帯電話・PHS・一部のIP電話0466-31-2511	携帯電話・PHS・一部のIP電話0466-31-2531

※取扱説明書・リモコン等の購入相談はごちらへお問い合わせください。

FAX（共通）0120-333-389

上記番号へ接続後、最初のガイダンスが流れている間に

「309」+「#」を押してください。直接、担当窓口へおつなぎします。

ソニー株式会社 〒108-0075 東京都港区港南1-7-1

接続する

スピーカーを、お聞きになる機器につないでください。

ラジオなどのモノラルジャックにつないだときは、左スピーカーからしか音が出ないことがあります。別売りのプラグアダプターPC-236MSを使うと左右のスピーカーから音ができます。

標準タイプのヘッドホンジャック（カセットデッキなど）につなぐには別売りのプラグアダプターPC-234S、または接続コードRK-G138をお使いください。

音量を調節する

接続した機器のボリュームコントロールで調節します。




* “ウォークマン”、“WALKMAN”、“WALKMAN”ロゴは、ソニー株式会社の登録商標です。


スピーカーキャップを着せ替える

キャップをはずす

- ①下側（脚の間）にあるフタのツメを、溝からはずす。
ツメの根元を押しながらフタを引いてはずします。

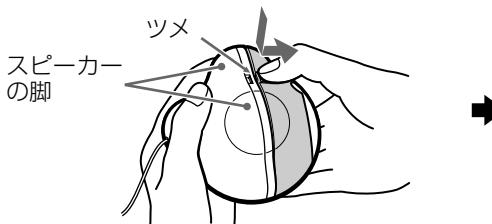


- ②ツメが溝からはずしたら、キャップをはずす。
図のように、キャップの両側面を押すようにして、引き抜きます。

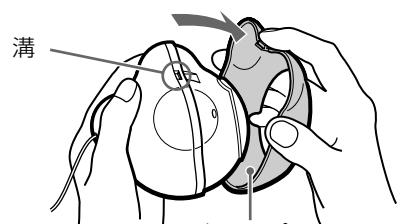

キャップを取り付ける

本体正面にキャップをかぶせ、キャップの下側にあるツメを本体下側の溝に、カチッと音がするまで差し込む。

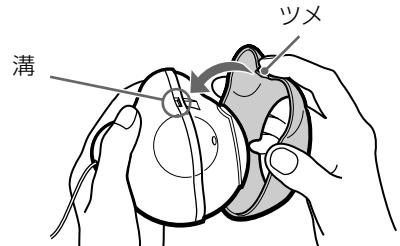

Precautions

- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.
- Keep TV sets, watches or personal credit cards using magnetic coding away from the stereo speaker system to prevent possible damage caused by the magnets in the system.
- Do not use alcohol, benzine or thinner to clean the cabinet.

Connection

Connect the system to the equipment.


When the speakers are connected to a monaural jack such as a radio, the sound may be output only from the left speaker. In this case, use the optional plug adaptor PC-236MS so that the sound is output from both speakers.

To connect to a standard headphone jack (cassette deck etc.)

Use the optional plug adaptor PC-234S or connecting cord RK-G138.

To adjust the volume

Adjust the volume with the volume control of connected equipment.

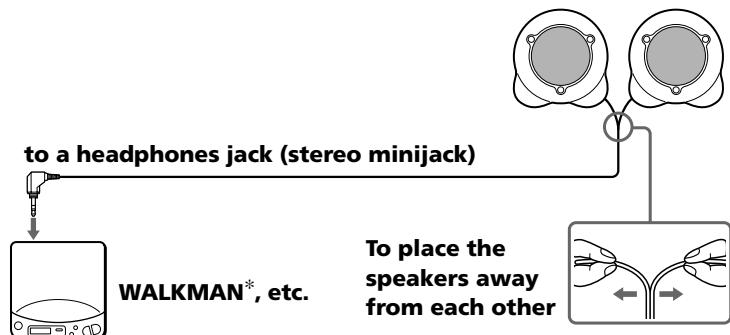



* "WALKMAN" and "WALKMAN" logo are registered trademarks of Sony Corporation.

To replace the speaker cap

To remove the speaker cap


- ① Unlatch the hook located on the bottom of the cap between the speaker feet.

- ② After the hook is off the catch, squeeze both sides of the cap to pull it out from the speaker as in the illustration below.

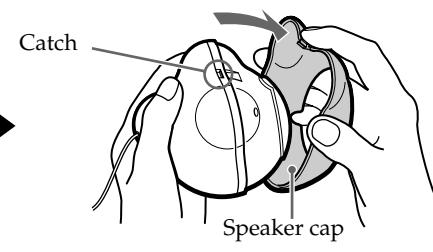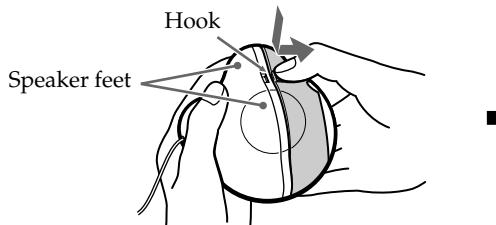

To attach the speaker cap to the cabinet

Put the cap on the front of the speaker and insert the hook located on the bottom of the cap until it clicks.

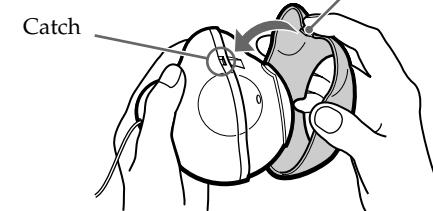

Specifications

Speaker system:

Bass reflex type

Speaker unit:

Full-range (magnetically shielded):

ø 57 mm (2 1/4 in.)

8 ohms

0.05 W + 0.05 W

0.1 W + 0.1 W

Approx. 89 x 93 x 99 mm (w/h/d)

(3 5/8 x 3 3/4 x 4 inches)

Approx. 344 g (12 oz.) incl. speaker cord

Speaker cap (2 sets)

(Attached to speaker enclosures and one spare set.)

Connecting cord RK-G138

(stereo 2 way plug↔stereo mini jack) (3m)

Plug adaptor PC-234S (stereo plug↔stereo mini jack)

PC-236MS (mini plug↔stereo mini jack)

Design and specifications are subject to change without notice.